ecodry DSH Operating Instructions



Read these instructions before operating the ecodry DSH and keep them in a safe place. If you have any questions or problems, you can find additional information at www.ecodry.ch

1. select operating mode

Press the key and the key simultaneously for at least 3 seconds and select the desired operating mode:

For operation of a dehumidifier:

For operation of a humidifier: The DSH must be be switched off

Technical specifications

- Power connection: 230V AC / 50HZ
- Max. Power: 16A / 3680 Watt (resistive
- load), 2A / 460W (inductive load)
- Operating temperature: 5°C-40°C
- Measuring range: 30% 90% rel.

Measuring accuracy: ±5% Measuring interval: 10 s

2. switch on the appliance


To switch on, press the button



3. dehumidification mode

If a dehumidifier (e.g. ecodry 425) is connected to the DSH, you must make the following settings. 1:

several times to select the desired humidity. The target value should be at least 5% lower than the actual value. After a few minutes, the LED light will turn green and the dehumidifier will start operating.

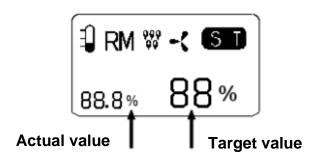

2. as the target value is reached, the unit switches off and the LED light changes from green to red.

4. humidification mode

If the ecodry DSH is operated with an air humidifier humidifier, the procedure is the same as point 3, except that the target value should be at least should be at least 5% higher than the actual value.

Safety instructions

The ecodry DSH may only be connected to 220/230 V alternating current and is intended for use with a dehumidifier or humidifier. Keep the appliance and packaging away from children.

Do not interconnect with timers and do not use extension cords. In case of malfunctions, unplug the DSH and check it for damage.

The ecodry DSH is designed for indoor use only and must not be indoors and must not be used outdoors. be used outdoors. Rain and water can damage the unit.

Repairs to the ecodry DSH may only be carried out by (e.g. electricians).

In the event of incorrect operation and/or repairs are carried out incorrectly, the warranty claim. In these cases, no liability In these cases, liability for damage is not assumed.

Troubleshooting

If you have any technical problems or questions regarding the ecodry DSH, please contact www.ecodry.ch