


FOTO INSTRUCTIONS OF REPLACING AN EMITTER IN **BTURCAC200V.....**




1. Unscrew 4 bolts into the side element

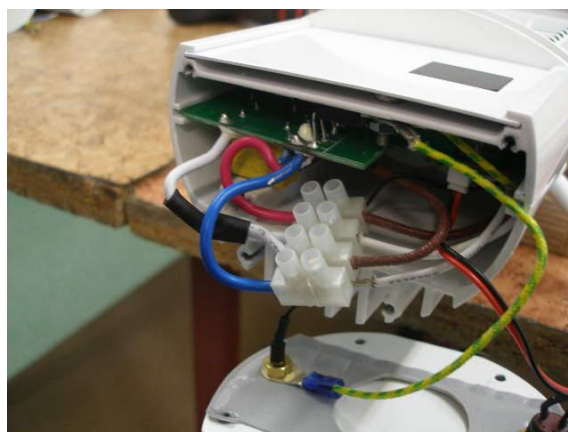

2. unscrew wires of emitter from  
electric, connection cube




3. Dismount the front cover

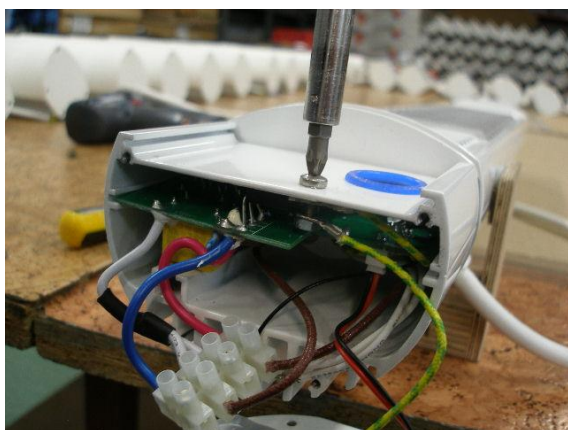

4. Dismount PE cables



5. Dismount the BT PCB plate

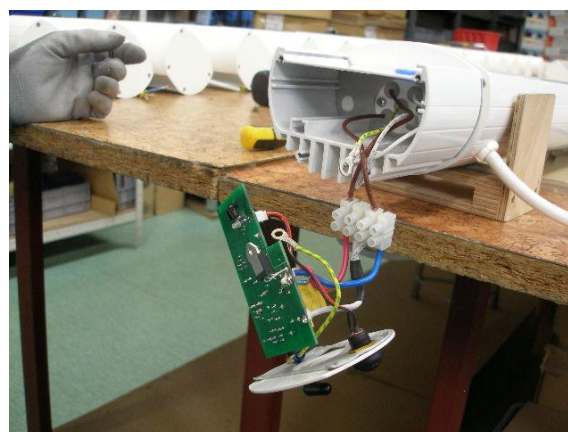

6. Dismounted elements of BT housing



7. Unscrew bolts fixing the BT housing




8. Disconnect a BT housing from the heaters



9. Unscrew the side element of the heater



10. Dismount the front element with a logo

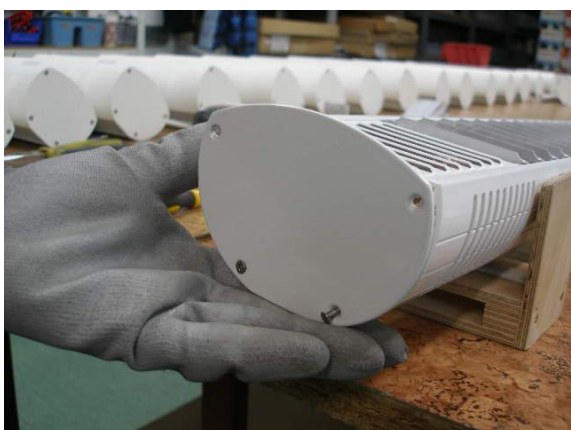


11. Dismount the second side element




12. Dismount the second front element




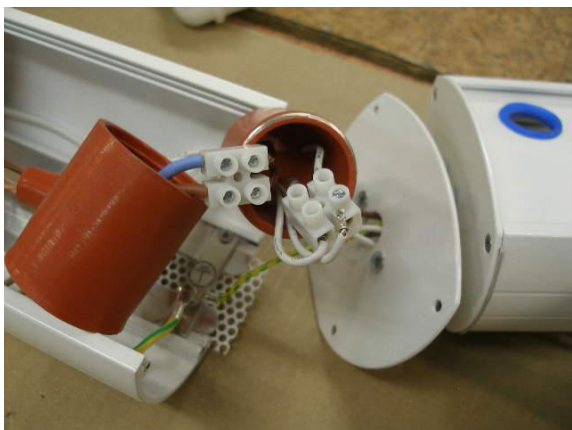

13. Dismount a sealing tube and unscrew, cables of the emitter

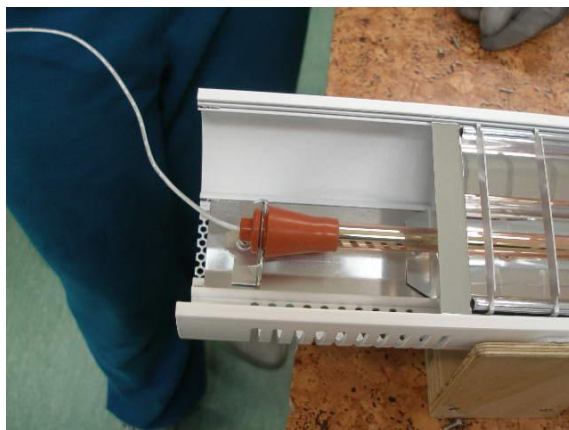

14. Dismount cables of the emitter

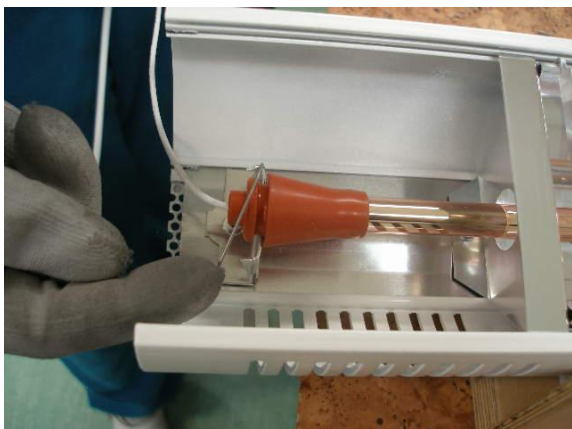

15. Dismount the fastening spring.



16. Dismount a spring from the second side.



17. Dismount sealing of the emitter



18. Dismount an emitter from a heater

**Assembly of a new emitter make In reverse order.**

**28.10.2016**